


# ROUGH OPENINGS

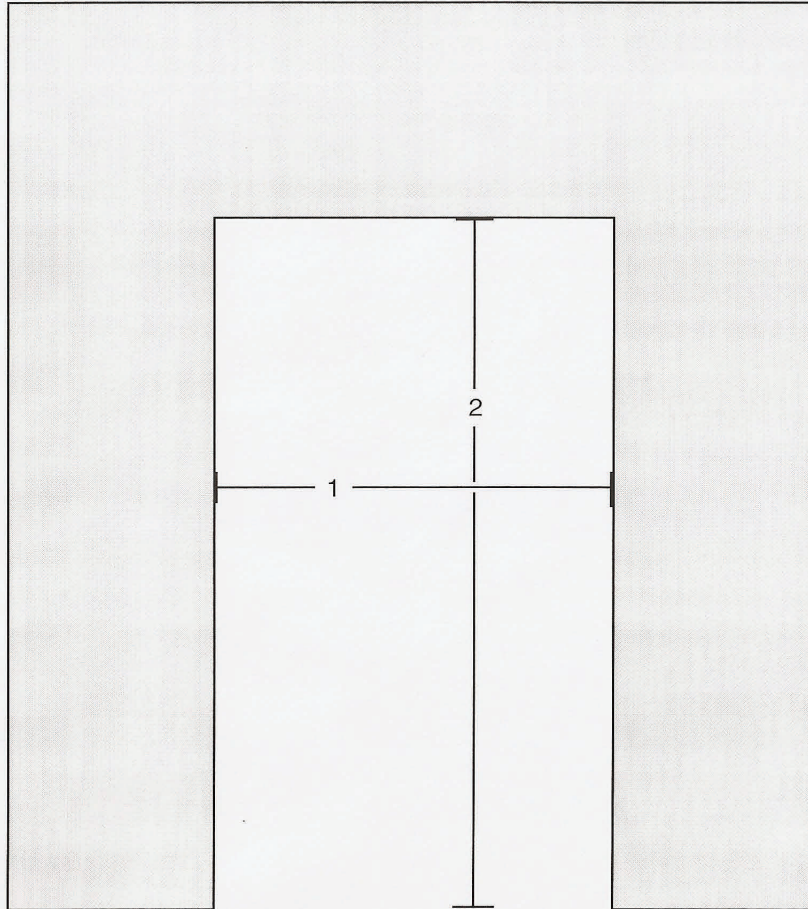

## WELDED HOLLOW METAL FRAMES (2" Face)

Single Swing Door: 1= Door Width + 4 1/2"  
2= Door Height + 2 1/2"

Double Swing Door: 1= Both Leaves' Width + 4 1/2"  
2= Door Height + 4 1/2"

## KNOCK-DOWN HOLLOW METAL DRYWALL FRAMES (2" Face)

Single Swing Door: 1= Door Width + 2"  
2= Door Height + 1"

Double Swing Door: 1= Both Leaves' Width + 2"  
2= Door Height + 1"

## KNOCK-DOWN TIMELY FRAMES

Single Swing Door: 1= Door Width + 1 1/4"  
2= Door Height + 1"

Double Swing Door: 1= Both Leaves' Width + 1 1/4"  
2= Door Height + 1"

## KNOCK-DOWN WOOD FRAMES

Single Swing Door: 1= Door Width + 2 1/2"  
2= Door Height + 1 1/4"

Double Swing Door: 1= Both Leaves' Width + 2 1/4"  
2= Door Height + 1 1/4"

## POCKET DOOR (USING JOHNSON 1500 TRACK)

Single Door: 1= Door Width x 2 + 1"  
2= Door Height + 4 1/2"

Converging Doors 1= Both Leaves' Width x 2  
2= Door Height + 4 1/2"